


The FSB 1251 conjures up images of 'square, practical and good', though its design is best summed up in the words of the great master himself: 'Rectangular, no-frills design defined solely by proportional contrasts – a miniature architectural counterpart to soberly planned houses. Supreme manufacturing precision reinforces the design's clarity.' (Hartmut Weise)

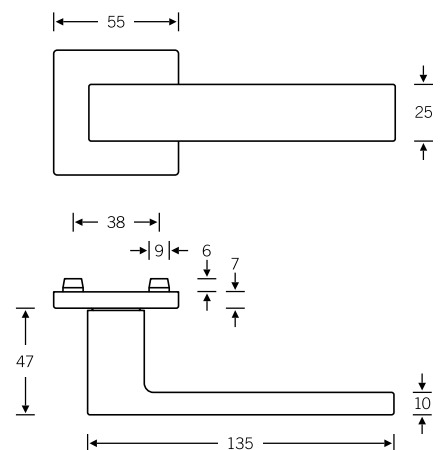


Design: Hartmut Weise

Other variants:
 – round roses
 – oval/angular backplates

Lever handle with privacy function

12 1251


Push-button lock, see page 526 ff.

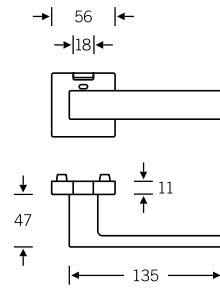


Window handle

34 1251

4

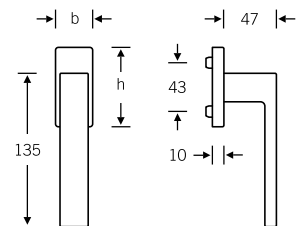


Lever/lever sets




➤ 12 1251 041 (N)

➤ 12 1251 049 (prv)


Broad backplate sets available upon request



➤ 12 1251 001 (N)

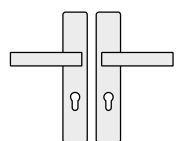


➤ 12 1251 021 (N)



➤ 13 4220 042 (R) with
12 1241 041 (N)


➤ 13 4220 052 (L) with
12 1241 041 (N)

Lever/knob sets




➤ 12 1251 043 (N)

Broad backplate sets available upon request;
for associated knobs, see page 328 f.





➤ 12 1251 003 (N)

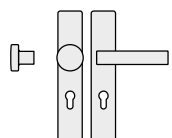


➤ 12 1251 023 (N)


WC sets





 12 1251 045 (N)

Broad backplate sets available upon request



 12 1251 005 (N)

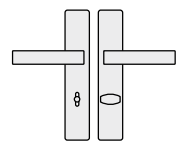




 12 1251 025 (N)




Window handles



34 1251 09032 (rose 27 × 62 × 10)
34 1251 09040 (rose 32.5 × 70 × 10)
34 1251 09036 (rose 25.5 × 60.5 flush-fitted)
34 1251 180 (lock adaptor RC 1–6)
34 1251 086 (lock adaptor with push-button RC1–6)

N = non-handed
prv = lever handle with privacy function
R = DIN RH, opening inwards
L = DIN LH, opening inwards
ILS = inactive-leaf set

 Female handles
 Plug-in handle for doors
 FSB ASL®

 FSB AGL®
 FS heavy-duty fitting
 EN 179 heavy-duty fitting

For bearings, see page 52 ff.